




Smart Power Strip

Quick Start Guide (EN)
Handleiding (NL)
Kurzanleitung (DE)
Guía de inicio rápido (ES)
Guide de démarrage rapide (FR)
Guida rapida (IT)
Guia de iniciação rápida (PT)
Hurtigstartsguide (DK)
Snabbstartsguide (SE)
Pikaopas (FI)
Krótki przewodnik (PL)
Rychlá příručka (CZ)
Príručka pre rýchly štart (SK)
Gyors útmutató (HU)
Ghid rapid (RO)
Упутство за коришћење (RS)
Navodila za uporabo (SI)

R5104



Version: 2.0

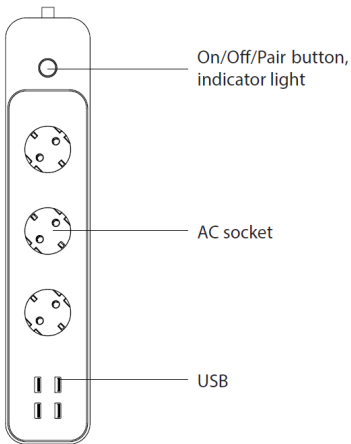

English

Specification

Rated voltage: 230V~50Hz

Rated current: 16A Max. total

Rated power: 3680W Max. total

Each USB output: Total 5V=2.4A Max.

Total USB output: Total 5V=4.2A Max.

Wi-Fi: IEEE 802.11 b/g/n 2.4GHz

Max. Transmission Power: 17.8 dBm

Working temperature: -10℃ -40℃

Dimension: 350x71x42mm

Cable length: 1.5 meters

Bluetooth: supported

Requirement to use

1. Woxhome app
2. WLAN-enabled router: 2.4GHz (Separate Band)

Set up Smart Power Strip to WOOX Home app

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your smartphone.
2. Open bluetooth on smartphone
3. Enable bluetooth and location permission for WOOX Home app, so that the app can find Smart Power Strip via bluetooth.

English

4. Launch the app "WOOX Home".
 5. Create a new account or log in to your existing account.
 6. Ensure the indicator light is quick flashing. If the indicator light isn't flashing: hold and press the pair button for 5 seconds until the indicator light starts to flash.
 7. Tap "+" to add the device.
 8. The Smart Power Strip will appear on the app. If Smart Power Strip does not appear, please check if the bluetooth and location permission of WOOX Home app are enabled in smartphone settings.
 9. Select the Smart Power Strip and continue.
 10. Confirm the Wi-Fi network and password.
 11. Note: only 2.4GHz WiFi is supported.
 12. The app will now search for the device and register it to your account.
 13. Enter the device name.
- Note: The device name will also be used by Amazon Alexa and Google Home.

Safety



English

- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.

Cleaning and maintenance Warning!

- Do not use cleaning solvents or abrasives.

- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

Support

If you need further help or have comments or suggestions please visit www.wooxhome.com

Nederlands ***Vereisten voor gebruik***

1. Woon app
2. WiFi router: 2.4GHz kanaal

Stel Smart Power Strip in op de WOOX Home-app

1. Download en installeer de app "WOOX Home" van Apple App Store of Google Play Store op uw smartphone.
2. Open bluetooth op smartphone.
3. Schakel bluetooth en locatietoestemming in voor de WOOX Home-app, zodat de app Smart Power Strip kan vinden via bluetooth.
4. Start de app "WOOX Home".
5. Maak een nieuwe account aan of log in op uw bestaande account.
6. Zorg ervoor dat het indicatielampje snel knippert. Als het indicatielampje niet knippert: houd de koppelingknop 5 seconden ingedrukt totdat het indicatielampje begint te knippen.
7. Tik op "+" om het apparaat toe te voegen.
8. De Smart Power Strip verschijnt in de app. Als Smart Power Strip niet verschijnt, controleer dan of de bluetooth en locatietoestemming van de WOOX Home-app zijn ingeschakeld in de smartphone-instellingen.

Nederlands

9. Selecteer de Smart Power Strip en ga verder.
10. Bevestig het Wi-Fi-netwerk en wachtwoord.
11. Let op: alleen 2,4 GHz WiFi wordt ondersteund.
12. De app zoekt nu naar het apparaat en registreert zich op uw account.
13. Voer de apparaatnaam in.

Opmerking: de apparaatnaam wordt ook gebruikt door Amazon Alexa en Google Home.

Veiligheid



- Om het risico op elektrische schokken te verminderen, mag dit product alleen worden geopend door een geautoriseerde technicus wanneer service nodig is.
- Koppel het product los van het lichtnet en andere apparatuur als er zich een probleem voordoet.
- Lees de handleiding zorgvuldig voor gebruik. Bewaar de handleiding voor toekomstig gebruik.
- Gebruik het apparaat alleen voor de beoogde doeleinden. Gebruik het apparaat niet voor andere doeleinden dan beschreven in de handleiding.

Nederlands

- Gebruik het apparaat niet als een onderdeel beschadigd of defect is. Als het apparaat beschadigd of defect is, vervang het apparaat dan onmiddellijk.
- Het apparaat is alleen geschikt voor gebruik binnenshuis. Gebruik het apparaat niet buitenshuis. Stel het product niet bloot aan water of vocht.

Reiniging en onderhoud Waarschuwing!

- Gebruik geen schoonmaakmiddelen of schuurmiddelen
- Maak de binnenkant van het apparaat niet schoon.
- Probeer het apparaat niet te repareren. Als het apparaat niet correct werkt, vervang het dan door een nieuw apparaat. Reinig de buitenkant van het apparaat met een zachte, vochtige doek.

Support

Als u meer hulp nodig heeft of opmerkingen of suggesties heeft, bezoek dan www.wooxhome.com